

## LE-541P

				541P
Figure	Key Number	Part Number	Description	
8	230	60035	Diaphragm Support (B40)	1
8	261	305-0976-110	Diaphragm Assembly (B40)	1
7	280	60032	Diaphragm Head (B40)	1
8	290	435-0035-655	Hex Head Screw, M8 x 90 mm	6
8	300	434-0005-085	Flat Washer, M8	6
9	419		Seal (See Notes 1 & 2)	
9	420		Seat (See Notes 1 & 2)	
9	422		Ball (See Notes 1 & 2)	
9	423	305-0879-500	Seat, Seal, Ball - Set (See Notes 1 & 2)	2
9	424	003-0155-070	Ball Guide	2
9	425	305-0870-009	Check Valve Assembly (See Note 1)	2
9	435	432-0236-038	Union Nut	2
9	445	60117	Union End, 1/2" FNPT	2
		Note 1:	Item 425 (Check Valve Assembly) Consists of Items 424 (Ball Guide), 420 (Seat), 422 (Ball), and 419 (Seal).	
		Note 2:	Seat, Ball and Seal not sold separately. Replacement requires purchase of Item 423 (Seat, Seal, Ball - Set).	
		<a href="#">Figure 7:</a>	Series G Basic Parts - Side View	
		<a href="#">Figure 8:</a>	Series G Basic Parts - Top View	
		<a href="#">Figure 9:</a>	B40 Plastic Check Valve Parts	