

LE-562P

				562P
Figure	Key Number	Part Number	Description	
8	230	60070	Diaphragm Support (B60)	1
8	261	305-0976-230	Diaphragm Assembly (B60)	1
7	280	60068	Diaphragm Head (B60)	1
8	290	435-0001-655	Hex Head Screw, M8 x 110 mm	6
8	300	434-0005-085	Flat Washer, M8	6
11	419		Seal (See Notes 1 & 2)	
11	420		Seat (See Notes 1 & 2)	
11	422		Ball (See Notes 1 & 2)	
11	423	305-0629-700	Seat, Seal, Ball - Set (See Notes 1 & 2)	2
11	424	003-0106-078	Ball Guide	2
11	425	305-0629-008	Check Valve Assembly (See Note 1)	2
11	435	432-0236-058	Union Nut	2
11	445	60133	Union End, 1" NPT	2
		Note 1:	Item 425 (Check Valve Assembly) Consists of Items 424 (Ball Guide), 420 (Seat), 422 (Ball), and 419 (Seal).	
		Note 2:	Seat, Ball and Seal not sold separately. Replacement requires purchase of Item 423 (Seat, Seal, Ball- Set).	
		Figure 7:	Series G Basic Parts - Side View	
		Figure 8:	Series G Basic Parts - Top View	
		Figure 11:	B60 & B80 Plastic Check Valve Parts	