

LE-587P

				587P
Figure	Key Number	Part Number	Description	
13	225	60165	Adapter Ring	1
13	227	435-0003-473	Socket Head Screw, M8 x 25 mm	6
7	280	021-0761-016	Diaphragm Head (B80)	1
8	230	60159	Diaphragm Support (B80)	1
8	261	60228	Diaphragm Assembly (B80)	1
8	290	435-0036-035	Hex Head Screw, M12 x 130 mm	6
8	300	434-0055-073	Flat Washer, M12	6
13	302	434-0009-095	Lock Washer, M12	6
13	305	435-0000-085	Hex Nut, M12	6
12	419		Seal (See Notes 1 & 2)	
12	420		Seat (See Notes 1 & 2)	
12	422		Ball (See Notes 1 & 2)	
12	423	305-0436-322	Seat, Seal, Ball - Set	2
12	424	029-2005-2016	Ball Guide	2
12	425	305-0583-022	Check Valve, Assembly (See Note 1)	2
12	435	045-0128-116	Connection, 1" NPT	2
12	437	004-0215-010	Valve Clamp	2
12	439	434-0009-015	Split Washer, M10	6
12	441	435-0035-765	Hex Head Screw, M10 x 65 mm	2
12	442	435-0035-785	Hex Head Screw, M10 x 75 mm	4
		Note 1:	Item 425 (Check Valve Assembly) Consists of Items 424 (Ball Guide), 420 (Seat), 422 (Ball), and 419 (Seal).	
		Note 2:	Item 423 (Seat, Seal, Ball - Set) Consists of Items 420 (Seat), 419 (Seal), and 422 (Ball), which are not sold separately.	
		Figure 7:	Series G Basic Parts - Side View	
		Figure 8:	Series G Basic Parts - Top View	
		Figure 12:	B60 & B80 Metallic Check Valve Parts	
		Figure 13:	B80 Liquid End Adapter Parts	