

Microprocessor Pump

Programming Quick Card


Manual No: 1757


Rev. : C

Rev. Date : 11/2015



MICROPROCESSOR PUMP - PROGRAMMING QUICK CARD

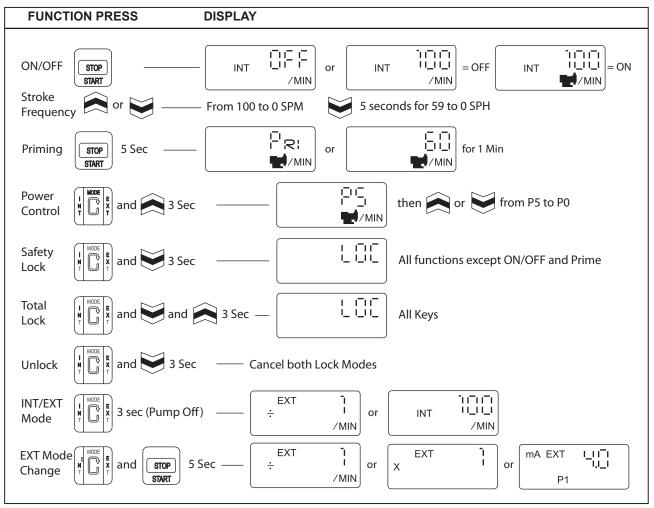

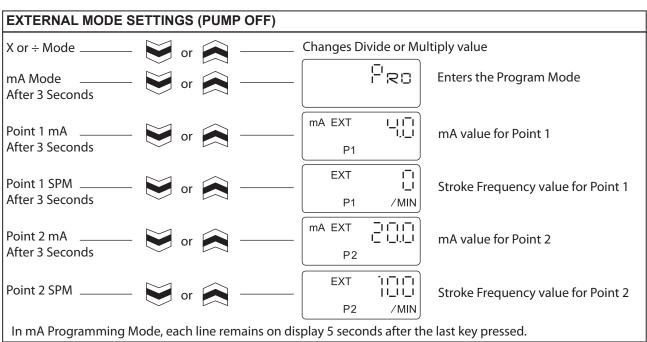

MICROPROCESSOR PUMP - PROGRAMMING QUICK CARD

CODE	ALARMS AND ERRORS	
E1	Low Level Alarm (With optional 29190 Level Switch)	
E2	Flow Alarm (With optional FM-200-9 Series)	
E3	Stroke Frequency > 100 SPM (÷ Mode Overpulse Protection)	
E4	Batch Accumulating Error (x Mode Overpulse Protection)	
E5	Excessive mA Signal > 21 mA	

ADVANCED PROGRAMMING MENU					
Access: ♠ to 100 SPM, hold♠ for 5 seconds					
	DISPLAY				
I MODE E X T	X.X	Software Revision			
I B X T	-i -i-i		Change with ♠ or ♥		
MODE	i i_i	Batch Accumulate	0 = Disable 1 = Enable		
E X T		Computer Interface	0 – Disabla 1 – Enabla		
MODE E		computer interface			
E X T	=	Automatic Voltage Compensation	0 = Disable1 = Enable		
I MODE E X T					
MODE	4 0	Flow Monitoring	0 = Disable1 = Enable		
E X T		Missing Pulse Level	0 to 255		
MODE E			If Flow Monitoring is Enabled		
I E X T	5 15	Input Pulse Width	Each Unit = 4 mS 15 = 60 mS		
I MODE E X T					
		Blowdown Solenoid	0 = Disable 1 = Enable		
MODE EXT	0.15	Playedourn ON Times (soccerds)	0 to 255		
MODE	'-' '-'	Blowdown ON Time (seconds)	0 to 255 If Blowdown Solenoid is Enabled		
I I I I I I I I I I I I I I I I I I I		Pump ON Time (seconds)			
		•	If Blowdown Solenoid is Enabled		
START	Back to Normal Operation				

We are a proud member of Accudyne Industries, a leading global provider of precision-engineered, process-critical, and technologically advanced flow control systems and industrial compressors. Delivering consistently high levels of performance, we enable customers in the most important industries and harshest environments around the world to accomplish their missions.



