

# **PE202**

Low Flow Magmeter Instructions







TABLE OF CONTENTS PE202 INSTRUCTIONS

# **General Information**

	General Information	Page 3
	Features	
	Specifications	Page 4
	Dimensions	Page 5
	Pressure Drop Curve	Page 5
In	nstallation	
	Positioning	Page 6
	Mounting	
	Piping	
	Power Supply	
	Grounding	
C	onnections	
	General Connection Information	Page 7
	Pulse Output Only with FT520	Page 7
	4-20 mA Device and FT430/440 with Single Power Supply	
	Dual Power Supply with Loop Isolation	Page 7
0	peration	
	General Operation Information	Back
Tı	roubleshooting	
	Problem	.Back
	Probably Causes	
	Things to Try	
	9	

GENERAL INFORMATION PE202 INSTRUCTIONS

The **PE202** magmeter is designed for low-flow chemical injection or difficult-to-meter applications with pulsating metering pumps in 3/4" to 1/4" pipe/tube. The housing is made of sturdy splashproof HDPE plastic.

With no moving parts, the PE202 can handle fluids containing particulate matter without clogging or jamming, keeping maintenance at a minimum. With no metallic parts (100% PVDF body and PVDF carbon fiber-filled electrodes), the meter is corrosion-resistant and compatible with a wide range of chemicals (consult factory for chemicals and concentrations). Accuracy is maintained with conductive fluids (>20 microSiemens) of varying viscosities and densities.

The PE meter is compact enough to fit most pump/injection systems. With zero straight pipe required after an elbow, it can be easily mounted in tight spaces. The mounting bracket adds stability.

The PE meter has an optoisolated current sinking pulse output that can be connected to the Seametrics FT430/440 rate/total display or FT520 batch processor, as well as an optoisolated 4-20 mA current loop for analog devices. Outputs and power are provided through a cable with 8-pin female circular connector.

#### **FEATURES**



**GENERAL INFORMATION PE202 INSTRUCTIONS** 

# **Specifications\***

Pipe Size		3/4", 1/2", 3/8", 1/4" **	
Fittings		1/2" NPT fittings standard in 3/4" or 3/8" flowbody. NPT threaded adapters available for above pipe sizes.	
Materials	Body	PVDF	
	Electrodes	PVDF carbon fiber filled	
	Ground	PVDF carbon fiber filled	
	Housing	HDPE with 25% glass	
	Adapters (NPT)	Polypropylene or PVDF	
Temperature	Ambient	0° to 130° F (-18° to 54° C)	
	Fluid	32° to 200° F (0° to 93° C)	
Pressure		150 psi	
Flow Range	-075	20 GPM max. (0.2 GPM cutoff)	
	-038	3 GPM max. (0.03 GPM cutoff)	
Accuracy	-075	±1% plus ±0.005 GPM of reading across rated range	
	-038	±1% plus ±0.002 GPM of reading across rated range	
Output Signal		Optoisolated current sinking or current sourcing pulse output: 30 Vdc, 5 mA max Optoisolated 4-20 mA current loop: 7 Vdc plus load voltage drop min; 50 Vdc max	
	-075	500 pulses/liter (1892 pulses/gallon)	
	-038	1000 pulses/liter (3785 pulses/gallon)	
Power		10–15 Vdc, 150 mA (linear power supply recommended)	
Conductivity		>20 microSiemens	
<b>Empty Pipe Dete</b>	ction	Hardware/software, conductivity-based	
Environmental		NEMA 4X standard; IP66 splashproof standard	

<sup>\*</sup> Specifications subject to change • Please consult our website for current data (seametrics.com).
\*\* Requires adaptors

NOTE: Consult factory for applications flowing sodium hypochlorite, sodium chlorite, sodium chlorate.


For applications with the listed chemicals, the following conditions apply:

Max concentration 15% / Max temperature 100° F


Flow is greater than 20% of max for accurate reading

GENERAL INFORMATION PE202 INSTRUCTIONS

# **Dimensions**

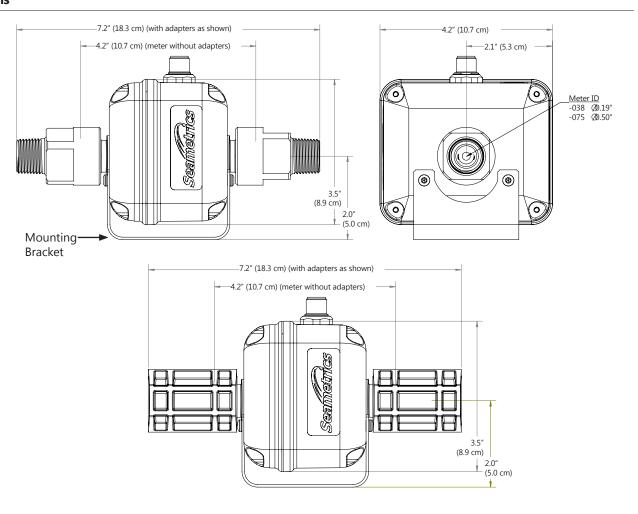

# **Pressure Drop Curve**

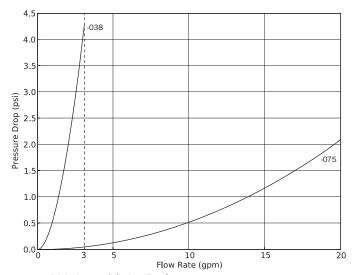


PE202-075 with 3/4" adapters.
PE202-038 with 3/8" adapters.
Actual curve dependant on pipe size/fittings

INSTALLATION PE202 INSTRUCTIONS

#### **Positioning**

The PE202 can be mounted vertically or horizontally. It is important to choose a position that will ensure full pipe. (Under certain conditions of empty or partially-full pipe the meter may give a pulse out when there is no flow.) With a zero straight pipe requirement after an elbow, the PE meter can be installed in tight spaces.

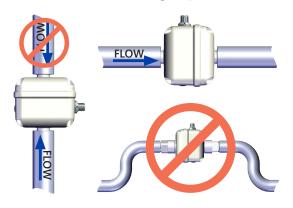


#### Mounting

It is highly recommended to use the mounting bracket provided. The mounting bracket uses two #8 screws on a 1.5" center.



The PE202 may be supported by its piping connections **IF** the piping is rigid. The meter and pipe must be perfectly aligned with no flexion at the fittings to prevent leakage or damage to the meter.

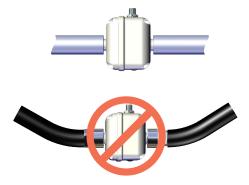

#### **Piping**


Metal pipe, metal tube, or plastic tubing can be used with the meter. The standard NPT fittings can be used with or without NPT adapters on 3/4" or 3/8" pipe. If used, apply Teflon tape onto the NPT fittings. NPT adapters should be hand tightened onto the fittings. Thoroughly clean the pipe threads and nose and apply Teflon tape to adapter threads. Hold adapters with a wrench while tightening the pipe to prevent damage to the meter.

#### **Power Supply**

A 12 Vdc linear, regulated power supply with an output current of at least 0.25A is recommended. If a switching power supply must be used, consult Seametrics for approved manufacturer's model numbers.


#### Grounding

In addition, it is necessary for proper operation to ground the unit to a good quality earth ground. Assure negative power supply is grounded to earth and to the entire electrical/mechanical system. If metal piping is used, jumper inlet and outlet pipes together and connect to ground for best results in metering accuracy. The cable shield drain wire should be left unconnected.

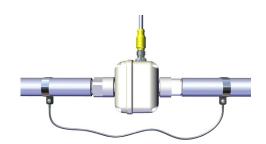

CONNECTIONS PE202 INSTRUCTIONS

Power and signal connections are provided through the 8-pin male bulkhead connector on the meter housing (20 ft (6 m) cable provided). See the Pin Assignment and Connections diagrams.

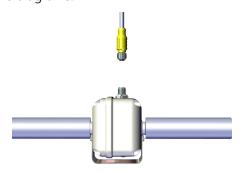





Pin #	Function	Color
1	Pulse (-)	White
2	Ground	Brown
3	Pulse (+)	Green
4	4-20 (+)	Yellow
5	Not used	Grey
6	Not used	Pink
7	4-20 (-)	Blue
8	Power (+)	Red

# **Pulse Output Only with FT520**

# 4-20 mA Device and FT430/440 with Single Power Supply Important: 4-20mA device input resistance must not exceed 250 $\Omega$

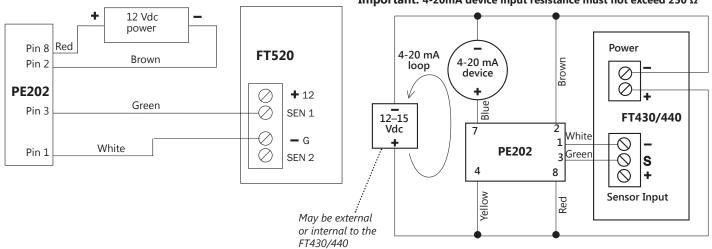

#### **Dual Power Supply with Loop Isolation**

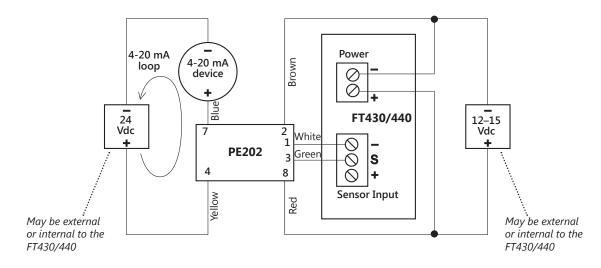

#### **OPERATION**

The meter will output one pulse when powered up. The newly-installed meter takes from a few seconds to a minute for the signal to stabilize at startup, especially if it has been dry. In normal operation, keep the meter filled with fluid and powered on to prevent this delay. When the meter is mounted properly, an empty pipe detection feature will normally detect absence of liquid in the pipe and register zero flow.

The 4-20 mA signal outputs 4 mA at zero flow and 20 mA at 20 gallons/minute flow or 3 gallons per minute, depending on model.

The pulse signal is a 50% duty cycle pulse set at:

PE202-075: 500 pulses/liter (1892 pulses/gallon) PE202-038: 1,000 pulses/liter (3785 pulses/gallon)

#### **TROUBLESHOOTING**

Problem	Probable Causes	Things to try
No output	Reversed flow direction	Reverse flow connections
	Empty pipe	Check piping conditions
	Flow rate below minimum	Select a different flow meter
	Loose or incorrect wiring	Check electrical connections
	Fluid conductivity too low	Select a different flow meter
	Electrical noise	Relocate meter or reduce noise
Flow rate incorrect	Fluid conductivity too low	Select a different flow meter
	Empty pipe	Check piping conditions
	Electrical noise	Relocate meter or reduce noise

