

FLEX-PRO A3 & A4

Feed Rates to 158.5 GPH
 Pressures to 125 PSI
 2500:1 Turndown ratio
 Tube Failure Detection
 Brushless DC Motor
 NEMA 4X (IP 66) Washdown
 2 Year Warranty



Model A4

Model A3

NEMA 4X **CE**



Exclusive:
TFD system
 Tube Failure Detection

Patents: 8,215,931 - 7,284,964 - 7,001,153 - 4,496,295 and other patents pending

Applications:

- Chemical Metering
- Wastewater Treatment
- Chlorination
- Chloramination
- Fluoridation
- Polymer Injection
- Pulp & Paper Slurries
- Printing Inks
- Oil Based Fluids
- Gaseous Fluids
- Shear Sensitive Fluids
- Caustics
- Chemical Slurries
- Food and Beverage

Features:

- Peristaltic pump design does not have valves that can clog requiring maintenance.
- Self priming - even against maximum line pressure. By-pass valves are not required. Cannot vapor lock or lose prime.
- Output rates to: 158.5 GPH (600 LPH) and pressures to 125 PSI (8.6 Bar).
- No maintenance brushless variable speed motor.
- Specially engineered tubing for long life at high pressures. Meets FDA 21 CFR requirements for food contact applications.
- Patented Tube Failure Detection (TFD) system. Senses tube failure by detecting chemical in the pump head. No false triggering.
- 2500:1 turndown ratio.
- SCADA Inputs include: 4-20mA, 0-10Vdc, and Pulse inputs for remote external speed control and 0-30 VDC / contact closure remote start/stop.
- Operator friendly digital touch pad with menu driven software.
- VGA Graphic multi-color backlit LCD displays remote/local control status, motor speed, output rate, input signal values, service and alarm status.
- Outputs include: Scalable 4-20mA or pulse, one 250V/6A relay and three 115V/1A contact closures assignable to monitor up to 17 different pump functions including TFD, FVS, remote/local control setting, motor on, fault, current operating mode, and others.
- Two CNC precision machined squeeze rollers and two alignment rollers for optimum squeeze, unparalleled accuracy, and tube life.
- Heavy duty rotor - single piece plastic rotor means no flexing and increased accuracy with no metal springs or hinges to corrode.
- Inject at maximum pressure in either direction (clockwise and counter clockwise).
- Patented feature to extended tube life.
- Compatible with Blue-White's output Flow Verification Sensor (FVS) system.

Engineering Specifications:

Maximum working pressure (excluding pump tubes):

125 psig (8.6 bar)

Note: see individual pump tube assembly maximum pressure ratings.

Maximum Fluid temperature (excluding pump tubes):

3/8" OD x 1/4" ID tubing connections: 130° F (54° C)

M/NPT connections: 185° F (85° C)

Note: see individual pump tube assembly maximum temperature ratings.

Ambient Operating Temperature

14°F to 115°F (-10°C to 46°C)

Ambient Storage Temperature

-40°F to 158°F (-40°C to 70°C)

Operating Voltage:

A3 MODELS: 96 to 264VAC-50/60Hz, 220W

A4 MODELS: 96 to 264VAC-50/60Hz, 350W

Power Cord Options:

115V60Hz = NEMA 5/15 (USA)

230V60Hz = NEMA 6/15 (USA)

220V50Hz = CEE 7/VII (EU)

240V50Hz = AS 3112 (Australia/New Zealand)

Enclosure:

NEMA 4X (IP66), Polyester powder coated aluminum.

Maximum Overall Dimensions:

A3 models: 8-1/8"W x 10-3/4"H x 15-1/4"D (20.6W x 27.3H x 38.9D cm)

A4 models: 12-1/8"W x 14-1/4"H x 18-5/8"D (30.8W x 36.1H x 47.3D cm)

Approximate shipping wt:

A3 models: 33 lb. (15.0 Kg)

A4 models: 58 lb. (26.3 Kg)

Motor speed adjustment range:

2,500:1 (0.04% - 100% motor speed)

Motor speed adjustment resolution:

0.1% increments > 10% motor speed

0.01% increments > 1% motor speed and < 10%

0.001% increments < 1% motor speed

Maximum viscosity:

12,000 Centipoise

Maximum suction lift:

30 ft. Water, 0 psig (4.5 m, 0 bar)

Display

3 color VGA backlit LCD, UV resistant.

Display Resolution

0.1 > 10% motor speed

0.01 > 1% motor speed and < 10%

0.001 < 1% motor speed

Display Languages

English, Spanish, French or German selectable.

Keypad

Ten button positive action tactile switch keypad.

Security

Programmable 4-digit password.

Materials of Construction:

Wetted components:**Pump Tube Assembly (Model Specific - 2 provided):**

Tubing: Norprene® or Norprene® Chemical or Tygothane®

Adapter fittings: .PVDF

Injection / Back-flow Check valve:

Body & insert: PVDF

Check Ball: Ceramic

Spring: Hastelloy C-276

Ball Seat O-ring: Viton® (optional EP)

Static Seal O-ring: Viton® (optional EP)

Duckbill anti-scale valve: Santoprene®

Ancillary Items provided**For "S" tubing type connections only:**

(Available on A3 only)

Suction Tubing: 3/8" OD x 1/4" ID x 10' Clear PVC

Discharge Tubing: 3/8" OD x 1/4" ID x 10' Polyethylene (LLDPE)

Suction Strainer: Polypropylene

For "B" barb tubing and "M" M/NPT connections only:

(Available on A4 and A3 Flex-A-Prene® only)

Suction Strainer:

Body: PVDF

Check Ball: Ceramic

Ball Seat O-ring: Viton® (optional EP)

For "C" Tri-clamp and "Q" Quick Disconnect connections only:

(Available on A3 Flex-A-Prene® only)

Suction Strainer: Polypropylene

Non-Wetted components:**Enclosure:**

413 Aluminum (Polyester powder coated)

Pump Head:

Valox® (PBT) thermoplastic

Pump Head Cover:

Polycarbonate for added strength and chemical resistance.

Permanently lubricated sealed motor shaft support ball bearing.

Cover Screws:

Stainless Steel

Roller Assembly:

Rotor:Valox® (PBT)

Rollers:Nylon

Roller Bearings:SS Ball Bearings

Motor Shaft:

Chrome plated steel

TFD System Sensor pins:

Hastelloy C-276

Power Cord:

3 conductor, SJTW-A Water-resistant

Tube Installation Tool:

GF Nylon

Mounting Brackets and Hardware:

316 Stainless Steel

Output Specifications:

Feed Rate		Max Speed	Max Pressure	Max Temperature	A3 Model Numbers			
Norprene® A3 Tube Pumps								
Meets FDA criteria for food Excellent chemical resistance CIP SIP								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.001 - 2.10	.003 - 7.8	.05 - 132	125	125 (8.6)	185 (85)	A3V24-*ND	A3V25-*ND	A3V26-*ND
.010 - 25.3	.038 - 96.0	.6 - 1596	125	125 (8.6)	185 (85)	A3V24-*NJ	A3V25-*NJ	A3V26-*NJ
.013 - 33.3	.050 - 126	.8 - 2100	125	125 (8.6)	185 (85)	A3V24-*NK	A3V25-*NK	A3V26-*NK
.013 - 33.3	.050 - 126	.8 - 2100	125	30 (2.1)	185 (85)	A3V24-*NKL	A3V25-*NKL	A3V26-*NKL
Flex-A-Prene® A3 Tube Pumps								
Meets FDA criteria for food Excellent chemical resistance Extra long tube life								
GPH	LPH	ML/MIN	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.002 - 4.8	.007 - 18.0	.12 - 300	125	110 (7.6)	185 (85)	A3V24-*NEE	A3V25-*NEE	A3V26-*NEE
.008 - 19.0	.030 - 72.0	.48 - 1200	125	110 (7.6)	185 (85)	A3V24-*NGG	A3V25-*NGG	A3V26-*NGG
Norprene® Chemical A3 Tube Pumps								
Meets FDA criteria for food Superior chemical resistance								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.006 - 14.5	.022 - 55.1	.4 - 920	125	50 (3.4)	130 (54)	A3V24-*TH	A3V25-*TH	A3V26-*TH
.011 - 28.5	.043 - 108.0	.7 - 1800	125	50 (3.4)	130 (54)	A3V24-*TK	A3V25-*TK	A3V26-*TK
Tygothane® A3 Tube Pumps								
Meets FDA criteria for food Resistant to oils, greases and fuels								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.002 - 4.6	.007 - 17.4	.1 - 290	125	65 (4.5)	130 (54)	A3V24-*GE	A3V25-*GE	A3V26-*GE
.004 - 10.1	.015 - 38.4	.3 - 637	125	65 (4.5)	130 (54)	A3V24-*GG	A3V25-*GG	A3V26-*GG
.010 - 24.9	.038 - 94.2	.6 - 1570	125	65 (4.5)	130 (54)	A3V24-*GH	A3V25-*GH	A3V26-*GH
.011 - 28.5	.043 - 108.0	.7 - 1800	125	65 (4.5)	130 (54)	A3V24-*GK	A3V25-*GK	A3V26-*GK
Feed Rate		Max Speed	Max Pressure	Max Temperature	A4 Model Numbers			
Norprene® A4 Tube Pumps								
Meets FDA criteria for food Excellent chemical resistance CIP SIP								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.01 - 28.5	.04 - 108	.7 - 1800	125	125 (8.6)	185 (85)	A4V24-*NH	A4V25-*NH	A4V26-*NH
.02 - 44.4	.07 - 168	1.1 - 2800	125	100 (6.9)	185 (85)	A4V24-*NJ	A4V25-*NJ	A4V26-*NJ
.02 - 50.7	.08 - 192	1.3 - 3200	125	80 (5.5)	185 (85)	A4V24-*NK	A4V25-*NK	A4V26-*NK
.02 - 54.0	.09 - 204	1.4 - 3400	125	100 (6.9)	185 (85)	A4V24-*NHH	A4V25-*NHH	A4V26-*NHH
.04 - 100.0	.15 - 378	2.5 - 6300	125	50 (3.4)	185 (85)	A4V24-*NL	A4V25-*NL	A4V26-*NL
.06 - 158.5	.24 - 600	4.0 - 10000	125	30 (2.0)	185 (85)	A4V24-*NP	A4V25-*NP	A4V26-*NP
Norprene® A4 Low Pressure Tube Pumps								
Meets FDA criteria for food Excellent chemical resistance Extra long life at low pressures								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.02 - 50.7	.07 - 192	1.3 - 3200	125	30 (2.1)	185 (85)	A4V24-*NKL	A4V25-*NKL	A4V26-*NKL
.04 - 111	.17 - 420	2.8 - 7000	125	30 (2.1)	185 (85)	A4V24-*NKKL	A4V25-*NKKL	A4V26-*NKKL
Norprene® Chemical A4 Tube Pumps								
Meets FDA criteria for food Superior chemical resistance								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.01 - 20.6	.03 - 78	.5 - 1300	125	30 (2.1)	130 (54)	A4V24-*TH	A4V25-*TH	A4V26-*TH
.02 - 42.8	.06 - 162	1.1 - 2700	125	30 (2.1)	130 (54)	A4V24-*TK	A4V25-*TK	A4V26-*TK
.02 - 50.7	.08 - 192	1.3 - 3200	125	30 (2.1)	130 (54)	A4V24-*THH	A4V25-*THH	A4V26-*THH
Tygothane® A4 Tube Pumps								
Meets FDA criteria for food Resistant to oils, greases and fuels								
GPH	LPH	ML/Min	RPM	PSI (bar)	F (C)	115V AC	230V AC	220V AC
.01 - 39.6	.06 - 150	1.0 - 2500	125	65 (4.5)	130 (54)	A4V24-*GH	A4V25-*GH	A4V26-*GH
.02 - 55.5	.09 - 210	1.4 - 3500	125	65 (4.5)	130 (54)	A4V24-*GK	A4V25-*GK	A4V26-*GK
.04 - 100	.20 - 378	2.5 - 6300	125	65 (4.5)	130 (54)	A4V24-*GKK	A4V25-*GKK	A4V26-*GKK

- The Flex-Pro Pump's motor speed is linear over the entire 0.05% to 100% adjustment range.
- Output versus pressure is nearly linear in all models. Larger tubes exhibit greater losses.
- See the instruction manual for output versus viscosity curves.
- For optimum tube life, specify the pump to operate at the lowest possible RPM and pressure.
- Output based on testing with water at 72 F, 5 foot suction lift, atmospheric conditions at sea level.

* Inlet/outlet connection type

S = 3/8" OD x 1/4" ID tubing compression type connections (A3 models only)

M = 1/2" male NPT (available on A3 & A4 models)

B = 1/2" ID tubing barb type connections (A3 Flex-A-Prene® and A4 models only)

C = 1/2" - 3/4" tri-clamp connections (A3 Flex-A-Prene® models only)

Q = Quick Disconnect (A3 Flex-A-Prene® models only)

Chemical Resistance of Tubing:

Flex-A-Prene® and Norprene® Tubing

Meets FDA criteria for food | Excellent chemical resistance

Alcohol general	Citric Acid 50%	Hydrochloric acid 33%	Potassium hydroxide
Aluminum Sulfate (Alum)	Ethylene glycol	Hydrocyanic acid	Potassium permanganate 40%
Ammonium chloride	Ferric chloride	Hydrogen peroxide	Propylene glycol
Ammonium hydroxide	Ferric nitrate	Hypochlorous acid	Sodium hydroxide 50%
Ammonium Sulfate (LAS)	Ferric sulfate	Iodine	Sodium Bisulfite
Benzyl alcohol	Ferrous chloride - 43% in water	Magnesium chloride	Sodium Chlorite 12%
Bleach	Ferrous sulfate	Magnesium sulfate	Sodium Hypochlorite 12.5%
Brine solutions	Fluosilicic Acid (up to 25%)	Phosphoric acid	Sodium sulfide
Calcium Hydroxide 10% (Lime Slurry)	Formic acid	Plating solutions	Sulfuric acid up to 50%
Calcium hypochlorite 20%	Glucose	Polyaluminum Chloride (PAC)	Tannic acid

Norprene® Chemical Tubing - Ultra smooth plasticizer-free bore (inner liner)

Meets FDA criteria for food | Superior chemical resistance

Ferrous Chloride (up to 40%)	Phosphoric Acid (up to 85%)	Bases	Applications:
Fluoboric Acid (up to 48%)	Potassium Hypochlorite (up to 70%)	Salts	Ink and solvent production
Fluosilicic Acid (up to 25%)	Sodium Phosphate (up to 30%)	Ketones	Battery acid filling
Hydrofluoric Acid (up to 48%)	Sulfuric Acid (up to 98%)	Alcohols	Specialty chemical production / processing
Nitric Acid (up to 71%)		Isobutyl Alcohol	Sensitive fluid transfer

Tygothane® Tubing

Meets FDA criteria for food | Resistant to oils, greases and fuels

Cyclohexane	Kerosene	Oils:	Oils:
Diesel Fuel	Lard	ASTM reference No.1,2,3	Linseed
Fatty acids	Mineral spirits	Castor	Lubricating
Gasoline	Soap solutions	Coconut	Mineral
Heptane	Turpentine	Fuel	
Hexane			

Norprene® is a registered trademark of Saint-Gobain.
Tygothane® is a registered trademark of Saint-Gobain.

Pump Tube Assembly Output Specifications:

Model A3 - Available Pump Tubes and Output Ranges

Tube Material	Tube Size Code	Max Pressure PSI (bar)	Max Temp F °C	Required Roller Part Number	Output Range		
					GPH	LPH	ML/Min
Norprene	ND	125 (8.6)	185 (85)	A3-SND-R	.001 - 2.1	.003 - 7.8	.05 - 132
Flex-A-Prene	NEE	110 (7.6)	185 (85)	A3-SNEE-R	.002 - 4.8	.007 - 18.0	.12 - 300
Flex-A-Prene	NGG	110 (7.6)	185 (85)	A3-SNGG-R	.007 - 18.2	.027 - 69.0	.46 - 1150
Norprene	NJ	125 (8.6)	185 (85)	A3-SNH-R	.010 - 25.3	.038 - 96.0	.6 - 1596
Norprene	NK	125 (8.6)	185 (85)	A3-SNH-R	.013 - 33.3	.050 - 126.0	.8 - 2100
Norprene	NKL	30 (2.1)	185 (85)	A3-SNH-R	.013 - 33.3	.050 - 126.0	.8 - 2100
Norprene Chemical	TH	50 (3.4)	130 (54)	A3-STH-R	.006 - 14.5	.022 - 55.1	.4 - 920
Norprene Chemical	TK	50 (3.4)	130 (54)	A3-STH-R	.011 - 28.5	.043 - 108.0	.7 - 1800
Tygothane	GE	65 (4.5)	130 (54)	A3-SGE-R	.002 - 4.60	.007 - 17.4	.1 - 290
Tygothane	GG	65 (4.5)	130 (54)	A3-SGE-R	.004 - 10.1	.015 - 38.4	.3 - 637
Tygothane	GH	65 (4.5)	130 (54)	A3-SGE-R	.010 - 24.9	.038 - 94.2	.6 - 1570
Tygothane	GK	65 (4.5)	130 (54)	A3-SGE-R	.011 - 28.5	.043 - 108.0	.7 - 1800


Model A4 - Available Pump Tubes and Output Ranges

Tube Material	Tube Size Code	Max Pressure PSI (bar)	Max Temp F (C)	Required Roller Part Number	Output Range		
					GPH	LPH	ML/Min
Norprene	NH	125 (8.6)	185 (85)	A4-MNH-R	.01 - 28.5	.04 - 108	.7 - 1800
Norprene	NJ	100 (6.9)	185 (85)	A4-MNH-R	.02 - 44.4	.07 - 168	1.1 - 2800
Norprene	NK	80 (5.5)	185 (85)	A4-MNH-R	.02 - 50.7	.08 - 192	1.3 - 3200
Norprene	NHH	100 (6.9)	185 (85)	A4-MNH-R	.02 - 54.0	.09 - 204	1.4 - 3400
Norprene	NL	50 (3.4)	185 (85)	A4-MNL-R	.04 - 100.0	.15 - 378	2.5 - 6300
Norprene	NP	30 (2.1)	185 (85)	A4-MNL-R	.06 - 158.5	.24 - 600	4.0 - 10000
Norprene	NKL	30 (2.1)	185 (85)	A4-MNH-R	.02 - 50.7	.08 - 192	1.3 - 3200
Norprene	NKKL	30 (2.1)	185 (85)	A4-MNH-R	.04 - 111	.17 - 420	2.8 - 7000
Norprene Chemical	TH	30 (2.1)	130 (54)	A4-MTH-R	.01 - 20.6	.03 - 78	.5 - 1300
Norprene Chemical	TK	30 (2.1)	130 (54)	A4-MTH-R	.02 - 42.8	.06 - 162	1.1 - 2700
Norprene Chemical	THH	30 (2.1)	130 (54)	A4-MTH-R	.02 - 50.7	.08 - 192	1.3 - 3200
Tygothane	GH	65 (4.5)	130 (54)	A4-MGH-R	.01 - 39.6	.06 - 150	1.0 - 2500
Tygothane	GK	65 (4.5)	130 (54)	A4-MGH-R	.02 - 55.5	.09 - 210	1.4 - 3500
Tygothane	GKK	65 (4.5)	130 (54)	A4-MGH-R	.04 - 100	.20 - 378	2.5 - 6300

FLEX-PRO® Peristaltic Metering Pump

Engineering and Technical Data

Dimensions:

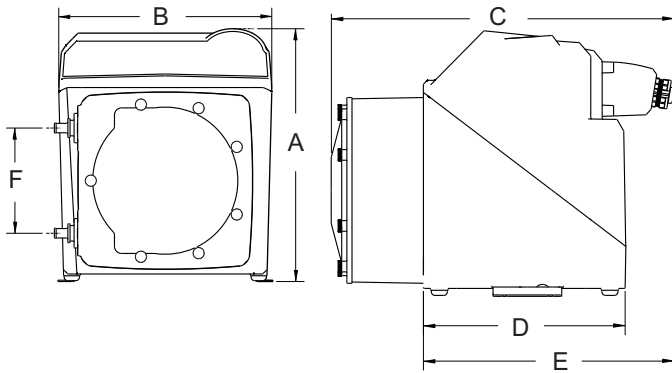

Dim	A3 Series		A4 Series	
	Inches	cm	Inches	cm
A	10-3/4"	27.3	14-1/4"	36.1
B	8-1/8"	20.6	12-1/8"	30.8
C	15-1/4"	38.9	18-5/8"	47.3
D	10"	25.4	11"	27.9
E	12-1/4"	31.0	13-5/8"	34.6
F	4-1/4"	10.7	6"	15.2

Model Number Matrix:

Flex-Pro Model Number							
A3	Flex-Pro A3 Peristaltic Metering Pump						
A4	Flex-Pro A4 Peristaltic Metering Pump						
Series							
F	Single manual output control (manual/local control only)						
V	Multiple automatic input output control and alarm modes (remote control)						
Maximum Motor Speed							
2	125 RPM (maximum rotor rotation speed)						
Power Cord (operating voltage requirement 96VAC to 264VAC)							
4	115V / 60Hz, power cord NEMA 5/15 plug (US)						
5	230V / 60Hz, power cord NEMA 6/15 plug (US)						
6	220V / 50HZ, power cord CEE 7/VII plug (EU)						
8	240V / 50HZ, power cord AS 3112 plug (Australia/New Zealand)						
9	230V / 50HZ, power cord BS 1363 plug (UK)						
X	No Power Cord						
Inlet/Outlet Connection Size, Connection Type, Connection Material							
S	3/8" OD x 1/4" ID Tube Compression Fitting, Natural PVDF (Kynar), available on A3 models only						
M	1/2" Male NPT Fitting, Natural PVDF (Kynar), available on A3 & A4 models						
B	1/2" ID Tubing Barb Fitting, Natural PVDF (Kynar), available on A4 models only						
C	1/2" - 3/4" Tri-clamp, Natural PVDF (Kynar), available on A3 models only, Flex-A-Prene® only						
Q	Quick Disconnect, Natural PVDF (Kynar), available on A3 models only, Flex-A-Prene® only						
Pump Tube Material, Pump Tube Size							
ND	Norprene® .075 ID - A3 models only	THH	Norprene® Chemical .250 ID (Dual Tube) - A4 models only				
NH	Norprene® .250 ID - A4 models only	TK	Norprene® Chemical .375 ID				
NHL	Norprene® .250 ID (65 PSI max pressure)- A4 models only	TKK	Norprene® Chemical .375 ID (Dual Tube) - A4 models only				
NHH	Norprene® .250 ID (Dual Tube) - A4 models only	GE	Tygothane® .125 ID - A3 models only				
NJ	Norprene® .312 ID	GG	Tygothane® .187 ID - A3 models only				
NK	Norprene® .375 ID	GH	Tygothane® .312 ID				
NKL	Norprene® .375 ID (30 PSI max pressure - longer life)	GHH	Tygothane® .312 ID (Dual Tube) - A4 models only				
NKKL	Norprene® .375 ID (30 PSI max - Dual Tube) - A4 models only	GK	Tygothane® .375 ID				
NL	Norprene® .500 ID - A4 models only	GKK	Tygothane® .375 ID (Dual Tube) - A4 models only				
NP	Norprene® .750 ID - A4 models only	NEE	Flex-A-Prene® .093 ID (Dual Tube) - A3 models only				
TH	Norprene® Chemical .250 ID	NGG	Flex-A-Prene® .187 ID (Dual Tube) - A3 models only				
Options (leave this blank for standard model with left facing head)							
1	T140-6V Threadless injection check valve, replaces A-104NK-6A threaded check valve						
2	C340A Foot valve, replaces standard C-342 inlet strainer (no check valve)						
R	Right facing pump head, input / output (Left facing fluid input / output is standard)						
D	Down facing pump head, input / output (Left facing fluid input / output is standard)						
A3	V	2	4	-	S	NH	Sample Model Number

Features list:

Feature
TFD (Tube Failure Detection) System Alarm
FVS (Flow Verification System) Alarm *
Motor reverse (rotor reversible)
Three position pump head rotation
Tube life timer
Output: One, 6 amp alarm relay
Output: Three, dry contact or maximum 30VDC/115VAC 1 amp contact closures
Output: Programmable 4-20mA signal or high speed pulse, proportional to pump output
Input: One, contact closure (remote start / stop)
Input: Remote speed control via 4-20mA, 0-10VDC, high speed digital pulse, contact closure pulse
Remote/Local control settings
Password protection
Display: Motor speed, Tube Failure Detection (TFD) system and Flow Verification System (FVS) alarm status
Display: Output in ml/min, oz/min, L/hr, Gal/hr, Gal/day, RPM, and input signal values
Automated PPM chemical dosing system
Available Operating Modes:
Manual (local): speed adjustment
Remote input: 4-20mA
Remote input: 0-10 VDC
Remote input: high speed frequency (pulse) input
Remote input: pulse triggered batch dispensing
Remote input: proportional PPM (parts per million) dosing with high speed frequency (pulse) input
Manual (local): batch dispensing
Manual (local): repeating cycle timer
Manual (local): fixed speed PPM (parts per million) dosing

* Requires Micro-Flo Sensor sold separately

